




BHD 1

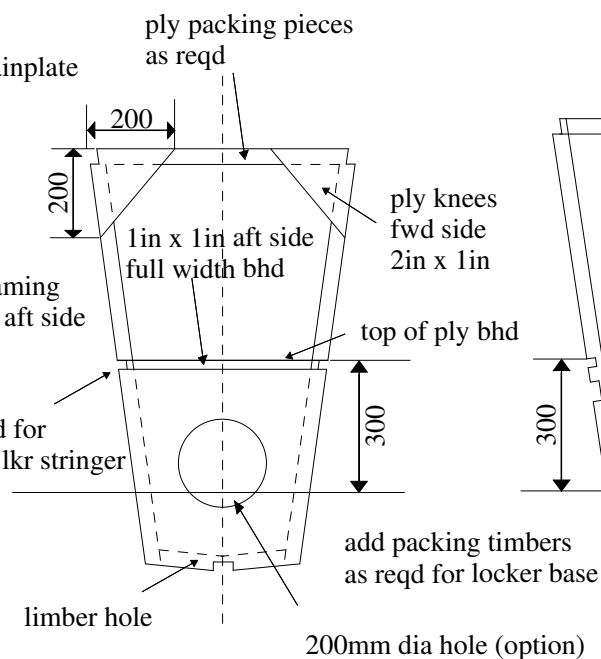

BHD 2

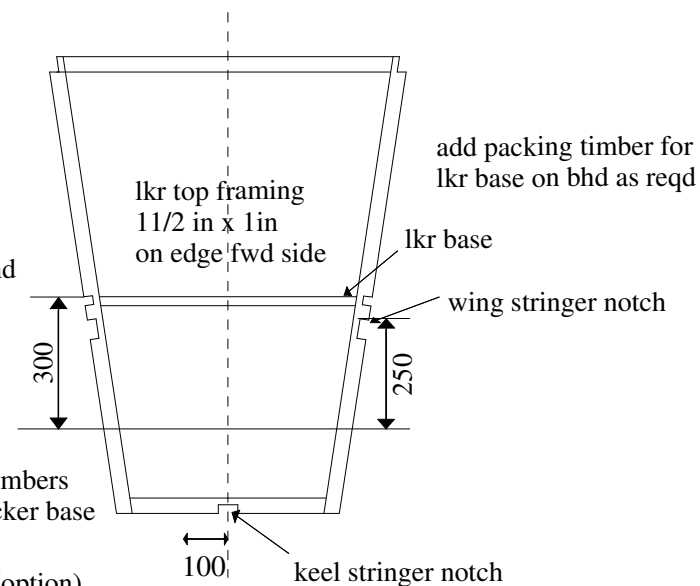


BHD 3

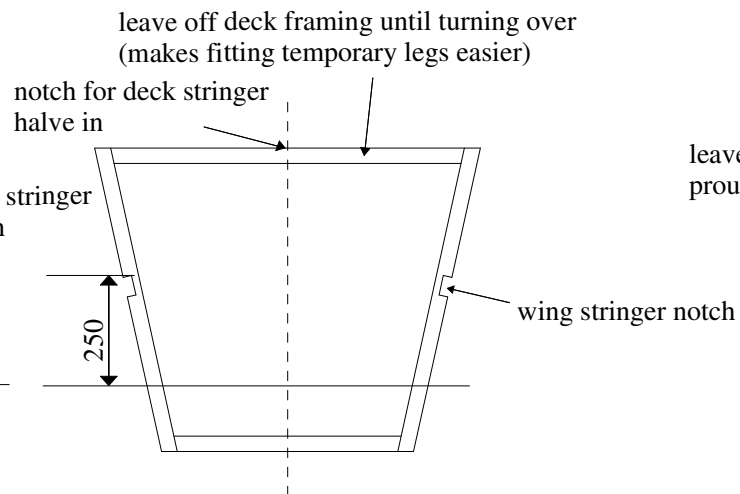


BHD 4


6mm ply knees each side
extend ply up timbers for neatness

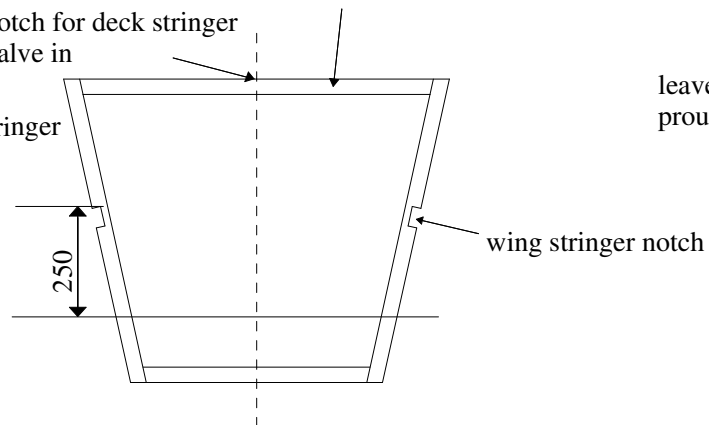

BHD 5
framing aft side

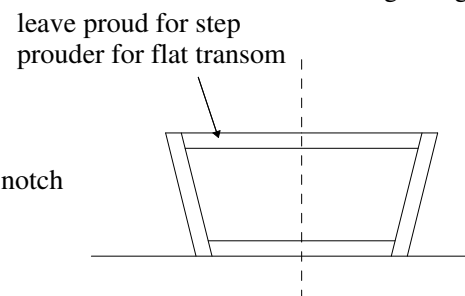

Transom

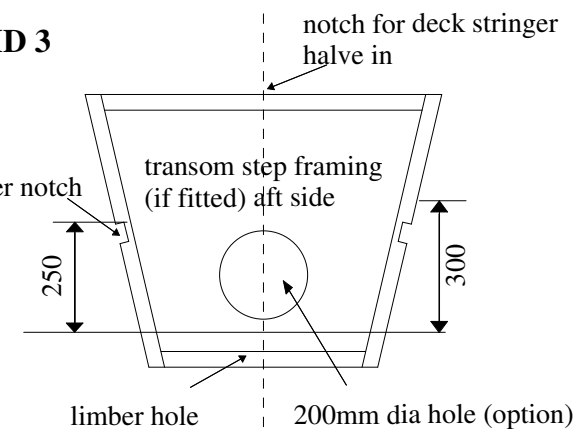

BHD 6

1 1/2 in x 1 in all round fwd side bhd except Bhd 5
leave proud for bevel as reqd Bhd 6 and transom

Mark CL and WL on both sides all bulkheads before adding framing
Drill 6mm dia hole at WL/CL intersect for string (used when setting up)

Limber (drain) holes as required Bhd 2, 6

Strike 18

4 Bulkhead Framing

Copyright WOODS DESIGNS
Jan 2008